

Confidential Lockable Whiteboard

These space-saving whiteboards have a writing surface 3 times the size when opened. Two hinged side panels can be angled to suit your audience, or folded in and locked to conceal information.

- 5 individual writing surfaces
- Double door with Allen key lock
- Magnetic option is flame retardant to Class B
- 5 year guarantee

Sizes, dimensions and weights:

Standard Magnetic

- PCONFPCS 0906 900x600mm 8.5kg
 PCONFPCS 1209 1200x900mm 16.8kg
 PCONFPCS 1212 1200x1200mm 21.5kg
 PCONFPCS 1512 1500x1200mm 26.4kg
 PCONFPCS 1812 1800x1200mm 35kg

Non Magnetic

- PCONFPNM 0906 900x600mm 8.kg
 PCONFPNM 1209 1200x900mm 16.8kg
 PCONFPNM 1212 1200x1200mm 21.5kg
 PCONFPNM 1512 1500x1200mm 26.4kg
 PCONFPNM 1812 1800x1200mm 35kg



View our full range at www.accessdisplays.co.uk or call us on 01793 613088 for more information

We are continually improving and modifying our product range and reserve the right to vary the specifications without prior notice. All dimensions and weights quoted are approximate and we accept no responsibility for variance.

Confidential Lockable Whiteboard

Care and Maintenance

Recommended Procedures

Use only good quality dry marker pens. We recommend you purchase a good quality dry wipe pens. Always allow dry marker ink to dry completely before erasing. This only takes a few seconds and will prevent smearing or ghosting.

Always replace dry marker pen caps when not in use to prevent them from drying out.

Do not persist with dry marker pens when they are clearly running out as the ink may prove difficult to erase. Do not leave dry marker ink on boards for extended periods. No more than 2 days is recommended. Over time, the ink may become difficult to erase.

Erase using a proprietary board eraser/clean soft cloth or tissue. Erasing by hand may result in smearing, and subsequent staining of the surfaces.

Surface Maintenance

When used correctly whiteboards require minimal maintenance. Regular use with quality dry markers and clean erasers/soft cloths/tissues will 'naturally' help to keep the surface clean.

Ideally writing should be dry erased using a clean soft cloth, tissue or board eraser at the end of each day. Where this is not practical erase at the next earliest opportunity to prevent staining.

The exact length of time that can elapse before marks become difficult to remove can vary depending on circumstances. The type of surface, pen and even the temperature all have a bearing on this. The longer the writing is left on a whiteboard, the more difficult it will become to dry erase.

Cleaning of Whiteboard Surfaces

Occasional cleaning is recommended to keep the surface free from the marks, dust and grease that accumulate.

Use clean, warm water and a clean soft cloth to remove minimal deposits. The surface will require thorough drying and buffing up prior to use.

For best results, we recommend occasional cleaning with a recommended Whiteboard Restorer Cleaning Fluid or Spray. When using a spray cleaner it is essential that the following procedure be followed:

- Always fully dry erase all writing on the whiteboard surface as you normally would, prior to commencing cleaning.

View our full range at www.accessdisplays.co.uk or call us on 01793 613088 for more information

We are continually improving and modifying our product range and reserve the right to vary the specifications without prior notice. All dimensions and weights quoted are approximate and we accept no responsibility for variance.

Confidential Lockable Whiteboard

- Use cleaning agent sparingly; using too much may hinder cleaning by making it more difficult/time consuming to remove.
- In the event that cleaning agent is not completely removed (and the surface is not thoroughly polished or buffed up) subsequent dry marker ink will mix with the cleaning agent residue and will result in smearing/staining/ghosting of the cleaned surface.
- Work the cleaning agent into the surface using a dry, soft cloth.
- On completion thoroughly buff up the surface using a dry, soft, clean cloth ensuring every last trace of cleaning agent is removed.

Please note:

- If in any doubt about the nature of the cleaning agent you intend to use, always try on a small test area of the surface first.
- Under no circumstances should scouring pads or abrasive bathroom/kitchen surface type cleaning agents be used on whiteboard surfaces. The more abrasive the cloth or cleaner, the more it will wear away the surface.
- Under no circumstances use lighter fluid or any other substance that could dissolve the laminates surface.
- Only clean whiteboard surfaces occasionally as and when necessary. Excessive or regular cleaning with water, spray window cleaner or any proprietary whiteboard-cleaning agent may prove detrimental to the surface in the long term.

Disclaimer: The above cleaning/maintenance recommendations have been derived from years of practical experience and should be regarded as helpful guidelines only.

View our full range at www.accessdisplays.co.uk or call us on 01793 613088 for more information

We are continually improving and modifying our product range and reserve the right to vary the specifications without prior notice. All dimensions and weights quoted are approximate and we accept no responsibility for variance.