

the exhibition specialists



Installing an Unframed Notice Board

Instructions to install an Unframed Notice Board

When fixing an unframed board, you will need to drill through the fabric.

Standard cups and screws are supplied. You will need one high speed drill and a thin piece of wood.

When installing the board drill the holes first, lay you board onto a flat surface, mark with a pen where the holes need drilling.

Now drill a hole through the thin piece of wood, this will be used to put on top of the fabric and over the pen marked, this will stop the fabric being pulled by the drill bit.

Once the holes have been drilled, position the board against the wall using a spirit level and mark the wall using the drill.

Remove the board and drill the full holes. Complete the install by fixing to the wall.

View our full range at <u>www.accessdisplays.co.uk</u> or call us on 01793 613088 for more information

We are continually improving and modifying our product range and reserve the right to vary the specifications without prior notice. All dimensions and weights quoted are approximate and we accept no responsibility for variance.